
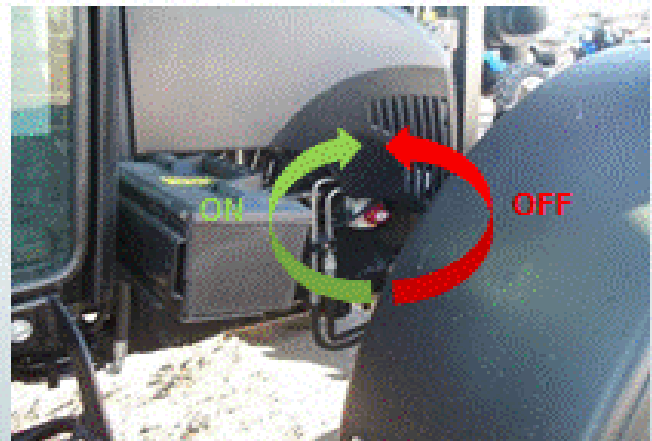



Battery switch off

- when tractor is loaded on a vessel turn battery switch isolator from "ON" (green position) to "OFF" (red position)
- when tractor must be unloaded turn battery switch isolator from "OFF" (red position) to "ON" (green position)

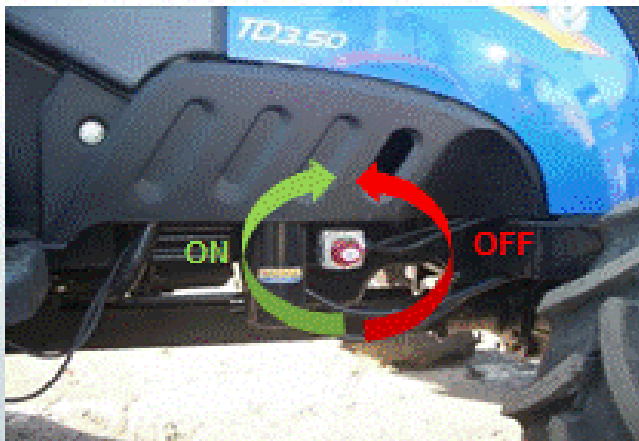

Battery switch off

- when tractor is loaded on a vessel turn battery switch isolator from "ON" (green position) to "OFF" (red position)
- when tractor must be unloaded turn battery switch isolator from "OFF" (red position) to "ON" (green position)

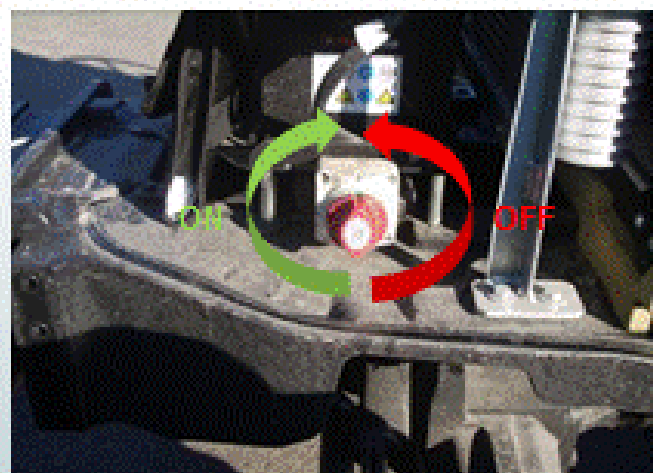

Please note that “safety switch variant is almost in 100% of EUR tractors” after we had started as a variant in TD4000F. In this case, turning this switch to “off” position will be enough. If this switch is not present (rare possibility), it will be enough to remove the positive terminal under the red cover marked with (+).

